SE7135

User Manual

Outdoor Fingerprint Intercom

www.sacelectronics.co.uk

.

1. Water-proof, vandal-proof, oxidation-proof outdoor camera with camera angle adjustable in four directions: up, down, left and right.
2. Crystal fingerprint device, 150 fingerprints can be saved.
3. 360° fingerprint recognition, easy to use.
4. Voice prompt to confirm fingerprint successfully or not. Only press the button slightly to unlock the door.

.

1. IR distance: more than 4M
2. Automatic gain control
3. Working temperature: -20°C~50°C
4. Resolution: CMOS more than 380 TV lines
5. Outdoor camera dimension: 205【W】X 115.8【H】X 57【D】mm

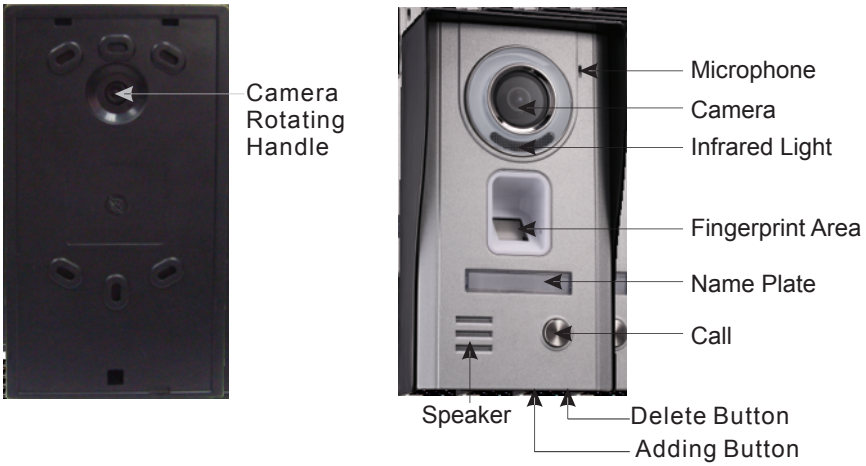

.

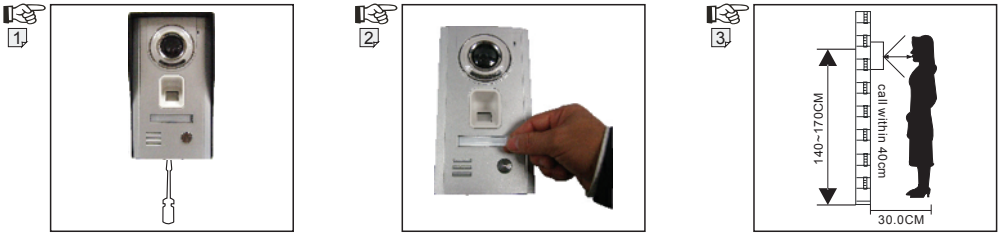

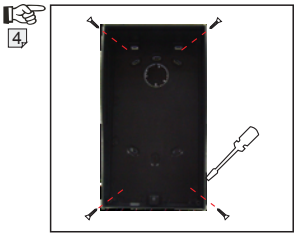

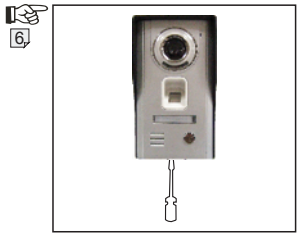

1. Take out the screws located at the bottom of the outdoor camera (Picture 1), and take apart the bracket.
2. Take off the name plate for marking family name or room name, and then fix the screws of the back cover (Picture 2).
3. Choose a suitable place on the wall to install the outdoor camera which should be 1.4m-1.7m above the ground and kept away from direct sunshine or rain (Picture 3).
4. Fix the rain shade by tightening the screws properly on the wall (Picture 4).
5. Fix the bracket of the outdoor camera on the wall by tightening screws, and then fix the screws at the bottom of the outdoor camera (Picture 5,6).

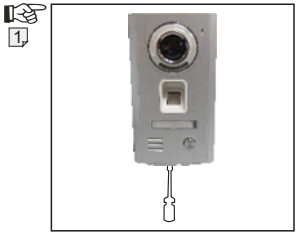
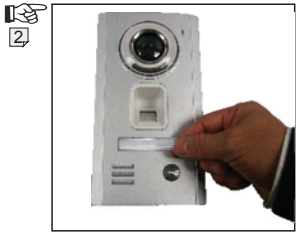
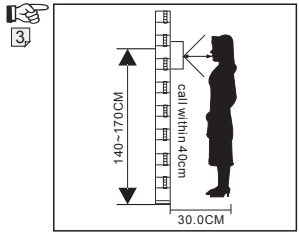

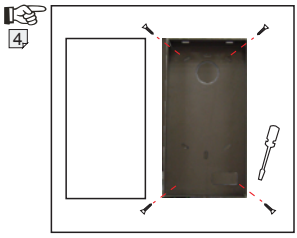
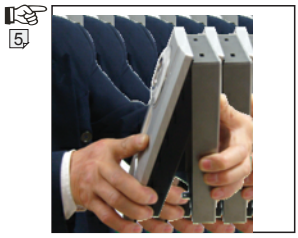
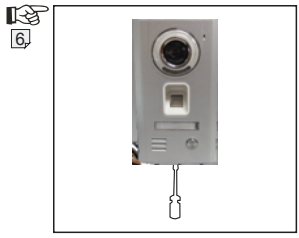

1. Take out the screws located at the bottom of the outdoor camera (Picture 1), and take apart the bracket.
2. Take off the name plate for marking family name or room name, and then fix the screws of the back cover (Picture 2).
3. Choose a suitable place on the wall to install the outdoor camera which

should be 1.4m-1.7m above the ground and kept away from direct sunshine or rain (Picture 3).

4. Drill one proper hole in the wall. The dimension of the wall should be 95【W】X 26【H】X 186【D】mm, the shape as in the picture, then fix the bottom cover of the outdoor camera with screws. (Picture 4)
5. Fix the bracket of the outdoor camera on the wall by tightening screws, and then fix the screws at the bottom of the outdoor camera (Picture 5,6).

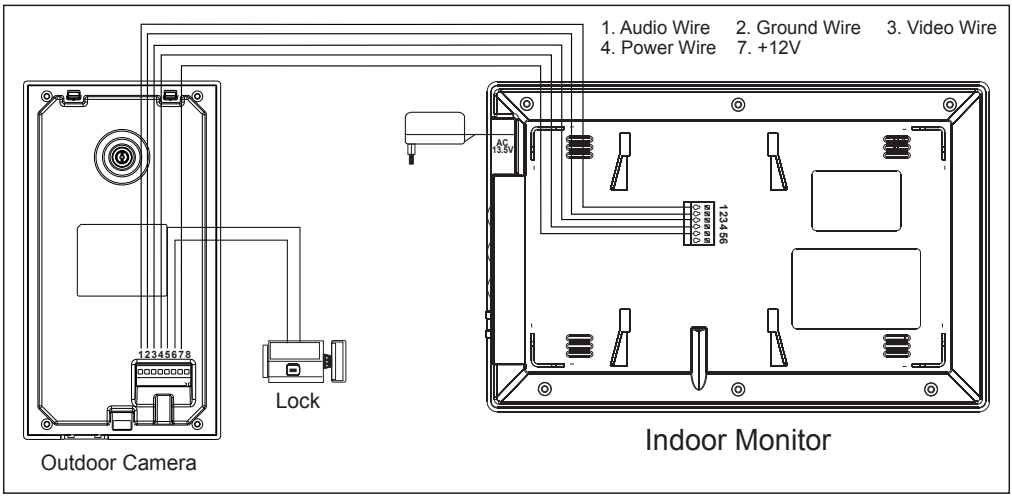

1. The 1, 2, 3, 4, 5 connection terminals of the indoor monitor connect to the 1, 2, 3, 4, 7 connection terminals of the outdoor camera accordingly.
2. The 5, 6 connection terminals of the outdoor camera connect to the electronic lock.

.

---

1. Press CALL button of outdoor camera and graceful rings will be heard from indoor monitor and images of visitors will be seen. Then you can talk with them and see them just by pressing TALK button of the indoor monitor. The talking time can last about 120 seconds. Press TALK button to end a conversation at any time.
2. Fingerprint unlock function instruction.

2.1. Host can register administrator's fingerprint and users' fingerprint. Host can set 3 administrator's fingerprints. The first one is the first administrator (senior administrator); the second and the third ones are the vice administrators. The

fourth and the left are users' fingerprints. Senior administrator can add or delete the vice administrator and user fingerprints. Vice administrator can only add or delete the users' fingerprints. To improve the fingerprint service life, it doesn't work at ordinary time. It only works when the fingerprint touches, and working time lasts 30 seconds.

2.2. Register senior administrator. Firstly, press the fingerprint area, then "Please input administrator's fingerprint" will be heard; Secondly, press the adding button," Please input fingerprint for registration" will be heard, then the host press the fingerprint area by his or her finger, then "Please input once more" will be heard. Host needs to enter two times, and each time successful or not will have different sounds to confirm. If successful, it will be shown" The first administrator's fingerprint registered successfully"

2.3. Register vice administrator. Firstly, please press the adding button, then "Please input administrator's fingerprint", and the first administrator needs to confirm by his or her fingerprint, then "Administrator's fingerprint verified successfully". Please input administrator's fingerprint for registration". Secondly, the user presses his or her finger on the fingerprint area to register, then "Please input once more". User needs to enter two times, and it is successful or not each time will have different sounds to confirm. If successful, it will be shown" The second administrator's fingerprint registered successfully". It's the same as the third administrator.

2.4. Register users. Firstly, please press the adding button, then "Please input administrator's fingerprint" and an administrator (Senior, the second or the third administrator) needs to confirm by his or her fingerprint, then "Administrator's fingerprint verified successfully", "Please input user's fingerprint for registration". Secondly, the user presses his or her finger on the fingerprint area to register, then "Please input once more". User needs to enter two times, and it is successful or not each time will have different sounds to confirm. If successful, it will be shown" Fingerprint registered successfully".

2.5. Delete user. Firstly, please press the delete button, then "Please input administrator's fingerprint" will be heard, then the second or third administrator presses his or her finger on the fingerprint area, and "Please input once more" will be heard, then press again. Secondly, If delete successfully, it will shown"

Delete successfully". It means all of the users of the administrator will be deleted, only the administrator himself or herself left. And other administrator's user will not relate to the delete one.

2.6. Delete administrator. Please press the delete button, then "Please input administrator's fingerprint" will be heard, then the senior administrator presses his or her finger on the fingerprint area, and "Please input once more" will be heard, then press again. Secondly, If delete successfully, it will shown" Delete successfully". It means all of the information of the administrator will be deleted, including himself or herself. The senior administrator should re-set the administrator.

2.7. Unlock: Registered user presses his or her finger on the fingerprint area, then "Thank you" will be heard and unlock the door.